



BYTESPEED

PRODUCT MANUAL

PERFORMANCE Q670M (MINI TOWER)




Contents


- Introduction – Page 3
 - Front I/O - Page 3,4
 - Rear I/O - Page 5,6
- Features and specifications – Page 7
- UEFI BIOS – Page 8

Performance Q670M Introduction

Front I/O (Diagram Page:4)

1. Power button
 - a. Press to turn on the computer.
 - b. To turn off the computer, open the **Start** menu, click the  **Power**, and then select **Shut Down**.
2. The indicator LED on the power button shows the system status of your computer.
 - i. **On:** The computer is on.
 - ii. **Off:** The computer is off or in hibernation mode.
 - iii. **Blinking:** The computer is in sleep mode.
3. Storage drive LED
 - a. This indicator is on when the storage drive is in use.
4. 1x Microphone Input
5. 1x Headphone Output
6. 2x USB 3.0 (**TYPE A**)
 - a. Transfer data or charge a device.
 - b. Data transfer speeds up to 5 Gbps.
7. 2x 3.5 in. External Drive Bay (Optional)
 - a. Allows the use of a media reader.
8. 2x 5.25 in. External Drive Bay (Optional)
 - a. Allows the use of DVD-RW's and Blu-Ray players

Front I/O

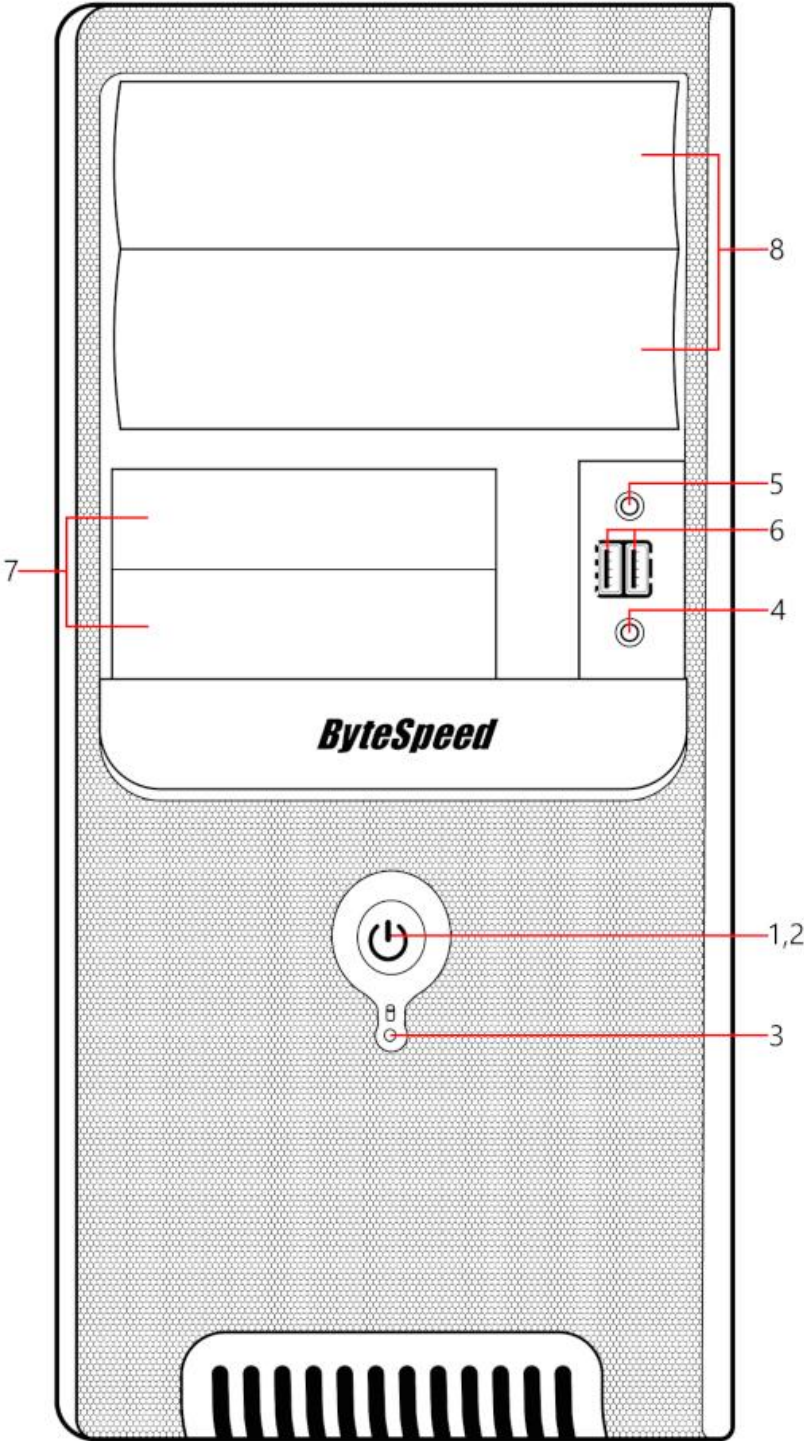


Performance Q670M Introduction Continued

Rear I/O (Diagram Page:6)

1. Power Supply
 - a. 400 W 80 Plus Gold Standard
 - b. ATX 12V Form Factor
2. Power Supply Switch
3. 4x PCI-E Expansion Slots (Full Height)
4. 1x PS/2 Mouse Connection
5. 1x PS/2 Keyboard Connection
6. 1x HDMI 2.1 Port
 - a. Connect video display.
 - b. Supports 4k @ 60Hz
7. 2x Display Port 1.4
 - a. Connect video display.
 - b. Supports 4k @ 60 Hz
8. 4x USB 3.2 (Gen 2 Type A)
 - a. Transfer data or charge a device.
 - b. Data transfer speeds up to 10 Gbps.
9. 2x USB 2.0
 - a. Transfer data or charge a device.
 - b. Data transfer speeds up to 480 Mbps.
10. 1x RJ-45 LAN Port
 - a. Connect to a local area network (LAN)
 - b. Gigabit LAN 10/100/1000 Mbps
11. 1 x Line in
12. 1 x Line out
13. 1 x Microphone

Rear I/O

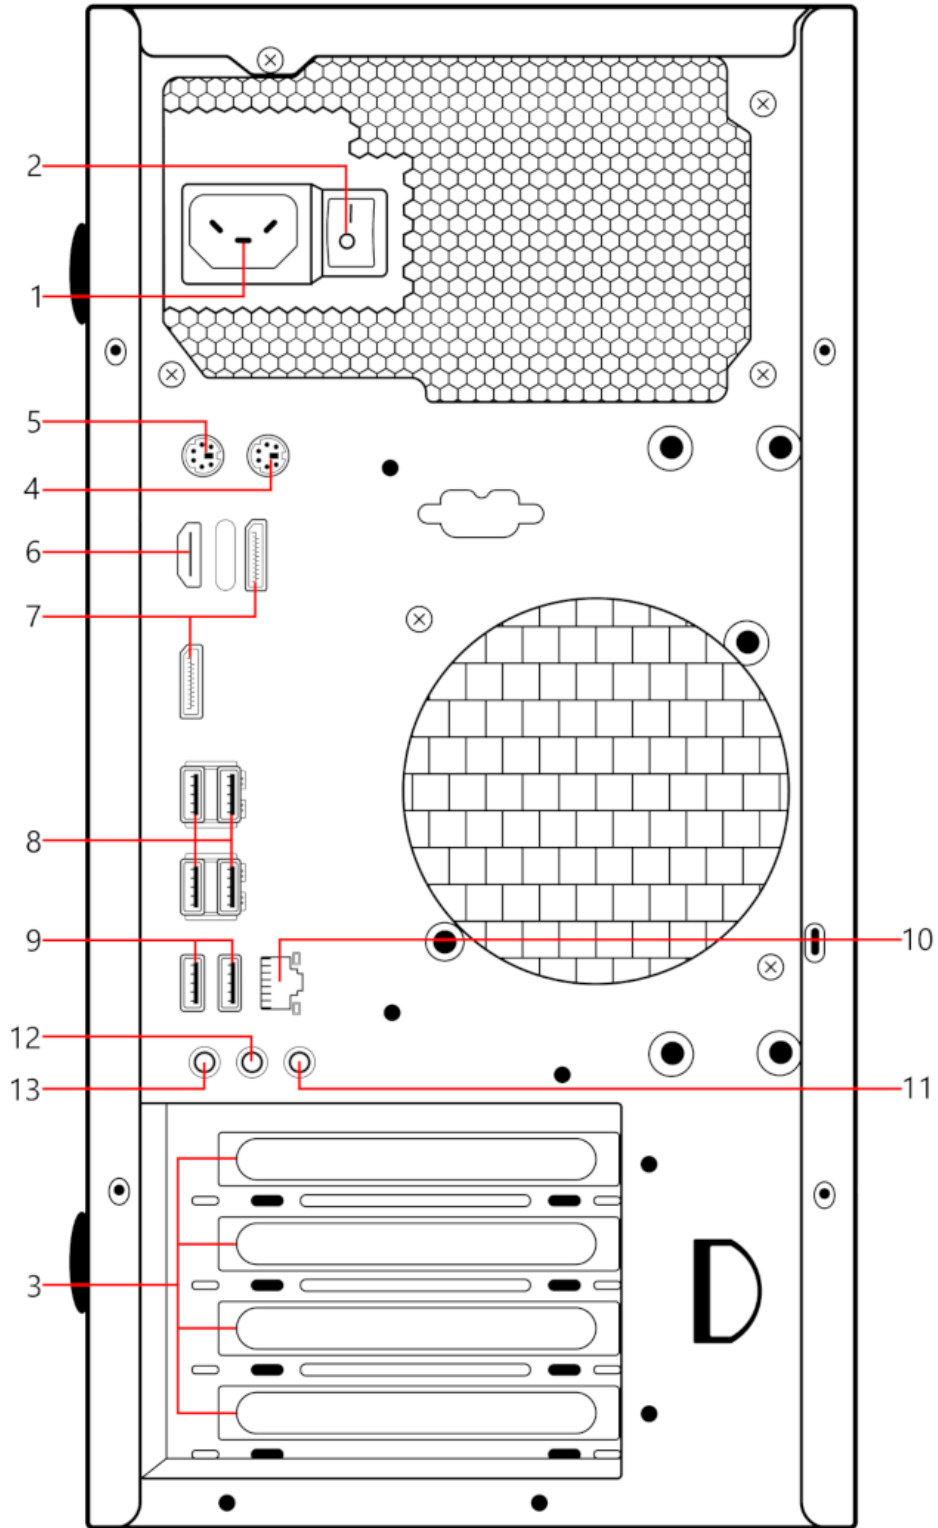

Features and specifications

- Case Dimensions
 - 14.2 x 7.4 x 16.1 in
- Hardware configuration
 - Right-click the Start button to open the Start context menu.
 - Click Device Manager. Type the administrator password or provide confirmation if prompted.
- Microprocessor
 - Supports Intel 12th, 13th, and 14th Gen (LGA1700)
 - To view the microprocessor information of your computer, right-click the Start button and then click System.
- Memory
 - 4 x DDR5 Slots up to 4800 MT/s
 - Maximum capacity: 128GB
- Storage devices (Up to 7 storage drives)
 - 5x SATA3 Connections
 - Transfer speeds up to 6 Gbps
 - 2x M.2 Socket
 - Supports type 2242/2260/2280 SATA3 @ 6 Gbps
 - PCIe Gen4x4 @ 6 Gbps
- Network features
 - Wireless connectivity (Configuration dependent)
 - ASUS PCE-AX3000
 - Bluetooth 5.0
 - Transfer speeds up to 3000 Mbps
 - Supports both 2.4 GHz and 5 GHz
 - Intel WIFI 6 AX200
 - Bluetooth 5.0
 - Transfer speeds up to 2400 Mbps
 - Supports both 2.4 GHz and 5 GHz
 - Ethernet connectivity
 - Connect to a local area network (LAN)
 - 1x Gigabit LAN 10/100/1000 Mbps
 - Wake-On-LAN
 - UEFI PXE

UEFI BIOS

Navigate in the BIOS interface

- **Enter BIOS**
 - F2 or DEL on boot up
- **Display the General Help screen.**
 - F1
- **Load previous values**
 - F2
- **Exit the submenu and return to the parent menu.**
 - Esc
- **Locate an item.**
 - ↑↓
- **Select a tab.**
 - ↔
- **Change to a higher or lower value.**
 - +/-
- **Enter the selected tab or submenu.**
 - Enter
- **Load optimized defaults.**
 - F5
- **Save your configuration and exit.**
 - F10